

SPECIFICATIONS

Type	Specification	Voltage	Frequency	Power
All models	Remote control	220-240V~	50/60Hz	2000W

MAINTENANCE

⚠ Always isolate the appliance from the power supply before commencing any maintenance.

⚠ Never use abrasive chemicals or materials to clean the unit.

Use a vacuum cleaner to clear the inlet and outlet vents of any dust or debris.

OVERHEAT PROTECTION

The heater is protected with an overheat protector that switches off the heater automatically in case of overheat. e.g. due to the total or partial obstruction of the grids. In this case, unplug the appliance, wait about 30 minutes for it to cool and remove the object which is obstructing the grids. Then switch it back on as described above.



THE EUROPEAN DIRECTIVE 2002/96/E.


At the end of its working life this equipment must not be disposed of as household waste. It must be taken to a local authority waste collection centre or to a dealer providing this service. Disposing of electrical and electronic equipment separately enables its components to be recovered and recycled to obtain significant savings in energy and resources. In order to underline the duty to dispose of this equipment separately, the product is marked with a crossed out dustbin.

ORKAhandyheat

Emley Business Park
Huddersfield HD8 9QY
Tell: 01924 849083
www.orka-handyheat.co.uk

ORKAhandyheat

PRODUCT INSTRUCTION MANUAL

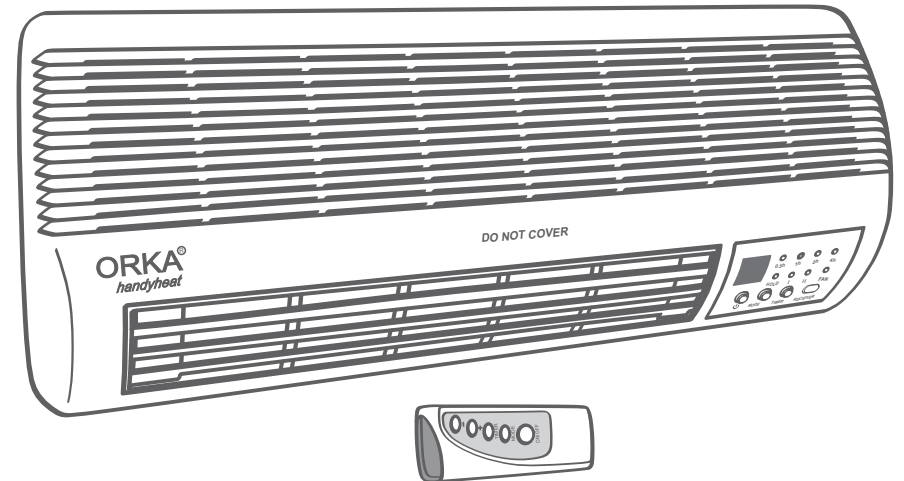

WALL MOUNTED HEATER

Thank you for purchasing the ORKA handyheat wall mounted heater. This heater is typically used in commercial settings and is ideal for a wide range of fixed installation heating applications. Please read and understand these instructions before commencing installation and leave them with the user when installation is complete.

PLEASE READ ALL INSTRUCTIONS BEFORE USING

Important safety points

- The Electrical installation must be carried out by a qualified electrician in accordance with the current edition of the I.E.E. Wiring Regulations.
- Only connect the unit to a single phase supply with a mains voltage as specified on the rating plate.
- Do not carry the appliance by the supply cord.
- The supply cord cannot be replaced by the user. If the cord is damaged the appliance should be returned to the manufacturer or an authorised service agent for replacement.
- The appliance must not be located immediately below an electrical socket outlet.
- Always keep the outlet and inlet grilles clean.
- Do not cover the outlet as it may cause overheating.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- This unit should be installed at least 1.5m from baths, showers, laundries, swimming pools etc.
- The heater must be positioned at a minimum height of 1.8m.
- The heater must be mounted at least 1m away from any combustible materials such as furniture, curtains, bedding etc.
- When the unit is first switched on or after a long period unused, a burning smell may occur to dust gathered on the heating element.
- This heater is not equipped with a device to control the room temperature.
- Do not use the heater in small rooms when they are occupied by persons not capable of leaving the room on their own unless supervision is provided.

INSTALLATION

Wall mounting

- Select a suitable surface to mount the heater on.
- The appliance must not be located immediately below an electrical socket outlet.
- This heater is not equipped with a device to control the room temperature. Do not use the heater in small rooms when they are occupied by persons not capable of leaving the room on their own unless supervision is provided.
- The heater must be positioned at a minimum height of 1.8m.
- The unit must be a minimum distance of 0.2m from any ceiling or surface above the unit.

The unit is mounted to the wall by means of two screws that locate into the slots on the back of the product; the screws should be spaced at 45.7cm apart.

Allow the screw heads to protrude from the wall by at least 5mm. The unit should only be mounted horizontally with the hot air outlet facing down.

INSTALLATION:

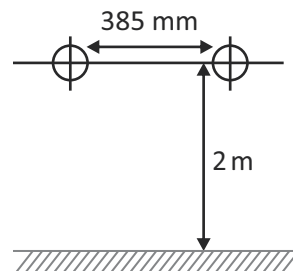


Fig. 1


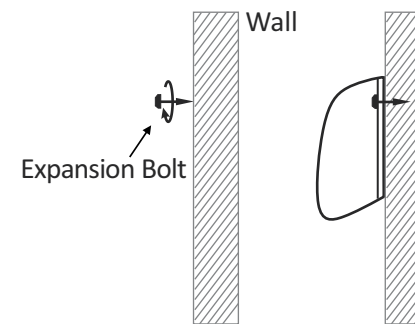


Fig. 2

Electrical

- The Electrical installation must be carried out by a qualified electrician in accordance with the current edition of the I.E.E. Wiring Regulations.
- If the heater is to be connected to the fixed wiring of the property then installation must include a double pole isolating switch with a break contact distance of at least 3mm following the colour coding below:
 - * Brown: L
 - * Blue: N

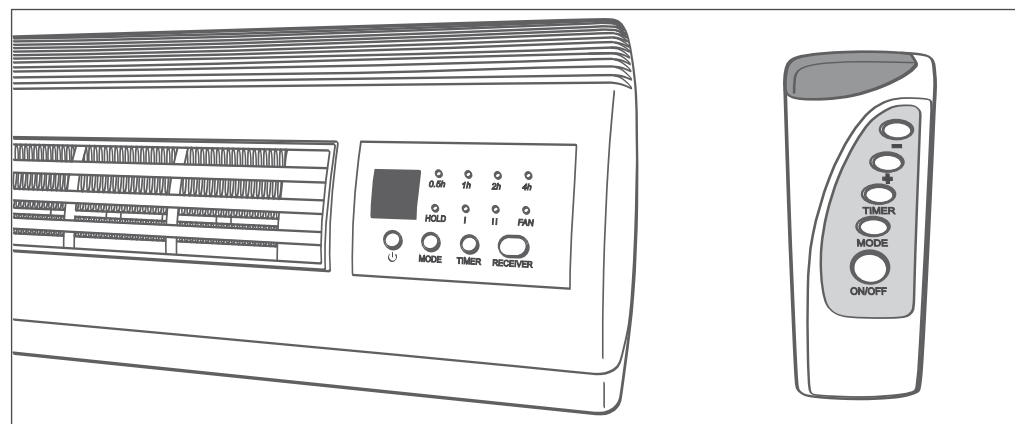

OPERATION

The heater can be controlled by the supplied remote control or directly using the buttons on the front of the unit.

1. To operate the unit first turn the unit ON using the ON/OFF switch either via the remote control or directly on the front of the unit.
2. When the unit is first turned on it will run on fan only operation. In order to select the heat level, press the ON/OFF button (on the front of the heater) again to toggle between the available levels. Alternatively if you are using the remote control the power settings are assigned to individual buttons. Press the button for the power level you require.
3. The unit has a run on feature, this allows the user to select the length of time the heater will operate before automatically shutting down. Press the timer button once for every 0.5h period you wish the unit to run for (maximum 7.5hrs available).
4. When the unit is turned off it will automatically run on fan only mode for approximately 30 seconds before it shuts down, this is normal.